

BergHOFF[®]
Yes, you're right!



G E M I N I S

Important safety warnings

Always take these precautions to minimise the risk of injuries or damage:

- Read all the instructions before using the knife sharpener and keep the instructions in a safe place so you can consult them later.
- The appliance is not intended to be used by children or persons with limited physical, sensory or mental abilities. Please keep the knife sharpener out of the reach of children.
- Do not try to sharpen very new knives.
- **Not suitable** for **ceramic** blades or very **sensitive** Japanese steel blades.
- Do not pull the knife through the appliance with force.

Instructions for use

1. Place the knife sharpener on the table and hold it firmly by the handle when sharpening. Pull the knife through each slot several times (eg. 5 times).

The slots have the following functions:



Slot 1: Diamond surface (preparations)

For repairing damaged blades and straightening blades before actually sharpening them.

Slot 2: Tungsten steel (sharpen)

Sharpens the blade and restores the cutting edge to a "V" shape.

Slot 3: Ceramic stone (fine tune)

Polishes the blade and equalises any surface irregularities that may have been caused - including by the sharpening procedure

2. How to sharpen a knife

a. Sharpen only clean and dry blades. Place the blade with the broad end near the knife handle into slot 1 and pull the knife gently towards you.

Attention: do not move the blade backwards and forwards - pull in one direction only.

b. We recommend repeating this procedure at least five times per slot, or more often, depending on the condition of the blade.

c. Rinse the knife carefully after sharpening the blade.